


Floating Measurements and Guarding

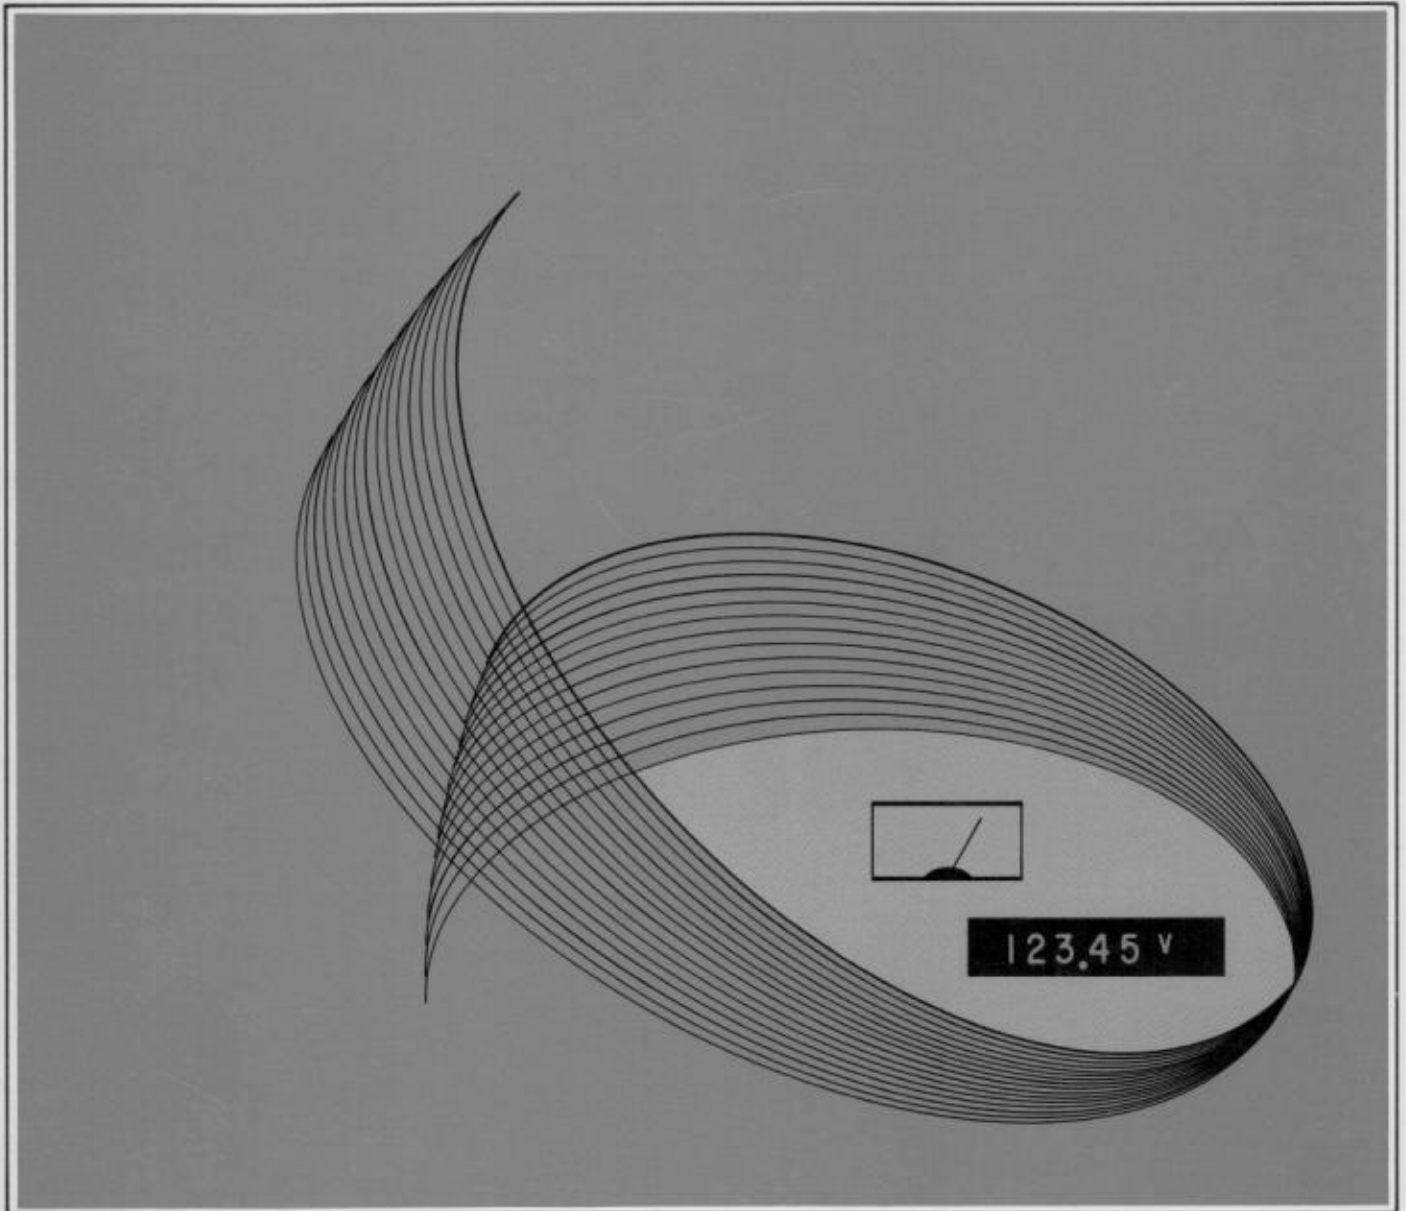

Floating Measurements and Guarding

Copyright 1970 by **HEWLETT-PACKARD COMPANY**

June 20, 1970

Guarding can effectively solve the common mode problem in floating measurements but has created a new kind of problem. Now there's a new terminal, the guard terminal. What's it for? Where should it be connected? When does an operator have to worry about it? Just what is guarding? This Application Note explains what floating measurements are, where common mode voltages come from, how guarding can solve the problem, and most important, how to use the guard connections.

The best place to start is with a brief discussion of floating measurements and what they are. First, look at the simple grounded measurement in Figure 1. E_{in} represents the source being measured together with any noise associated with it and is generally called the "normal mode source". R_a represents both the source resistance of the normal mode source and the lead resistance of the high lead; R_a is called the "high source resistance". R_b is the lead resistance of the ground lead. Current from E_{in} , normal mode current, flows through R_a and Z_1 and the instrument responds to the drop across Z_1 . As long as both grounds are alike both sides of R_b will be at the same voltage and no current will flow through it.

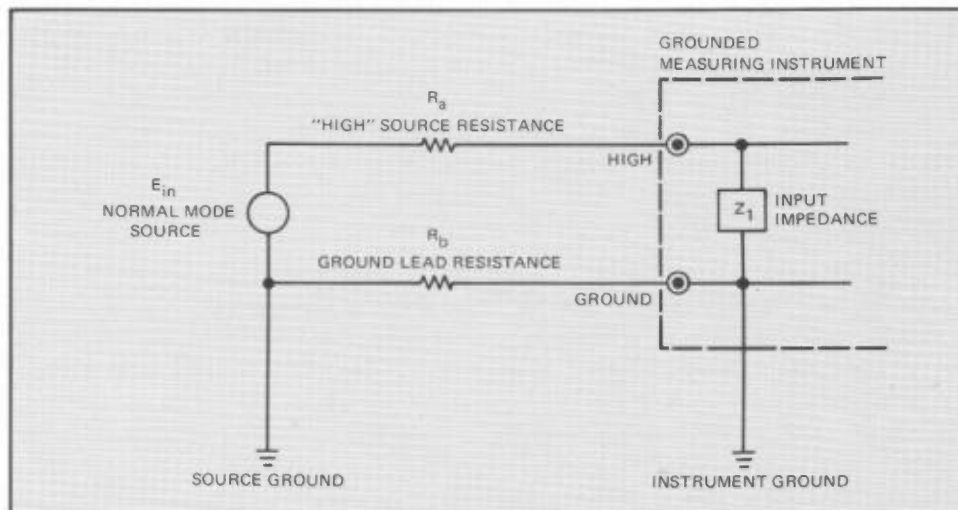


FIGURE 1. Simple Grounded Measurement

The Floating Voltmeter

The grounded voltmeter in Figure 2 can be made into a floating voltmeter by adding a shield between the inner circuits and the outer chassis or cabinet. The resulting instrument is shown in Figure 4. It has three input connections, called "high", "low", and "ground". "High" is the same as the high terminal in Figure 2; "low" is the inner chassis; and "ground" is the same as the ground in Figure 2. It also has two important internal impedances, Z_2 , the isolation impedance between low and ground, and Z_3 , the isolation impedance between high and ground.

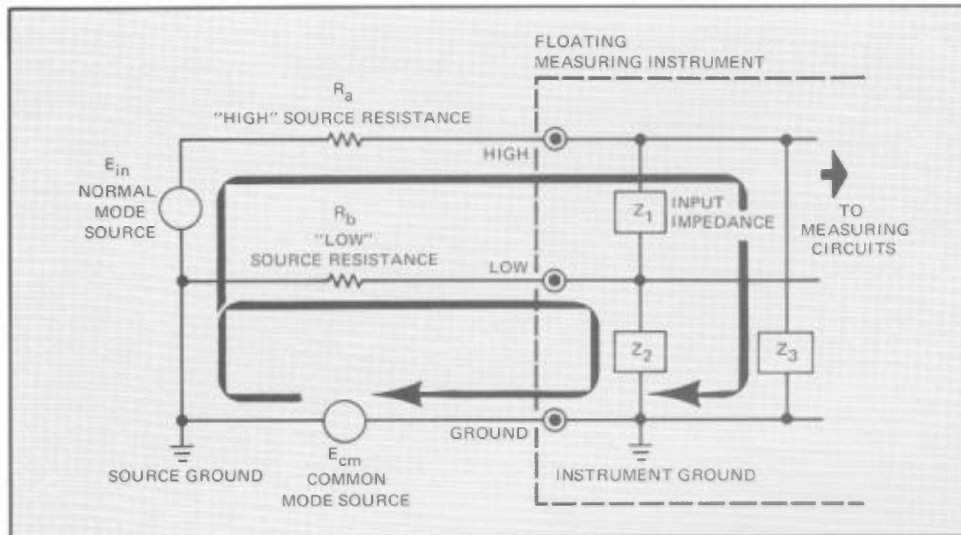


FIGURE 4. Inside an Ideal Floating Voltmeter

If Z_3 and Z_2 were equal and much larger than R_a and R_b , the common mode current would divide between the two loops shown in Figure 4 in about equal amounts. If R_a and R_b were also equal the voltage drop across Z_3 , applied at the top of Z_1 , would equal the drop across Z_2 , applied at the bottom of Z_1 . There would be no difference of potential across Z_1 , and therefore no normal mode offset due to common mode voltages — no common mode error. Such a floating voltmeter is called a "balanced" floating voltmeter. If R_a and R_b weren't equal the voltages at the top and bottom of Z_1 would no longer be equal, and there would be a net difference of potential across Z_1 . The result would be a normal mode offset proportional to the difference between R_a and R_b .

In most floating instruments Z_2 and Z_3 are far from equal. Usually Z_3 is much larger than Z_2 , so much larger that its effects on common mode are negligible . . . Z_3 practically amounts to an open circuit; then the instrument looks more like the one in Figure 5.

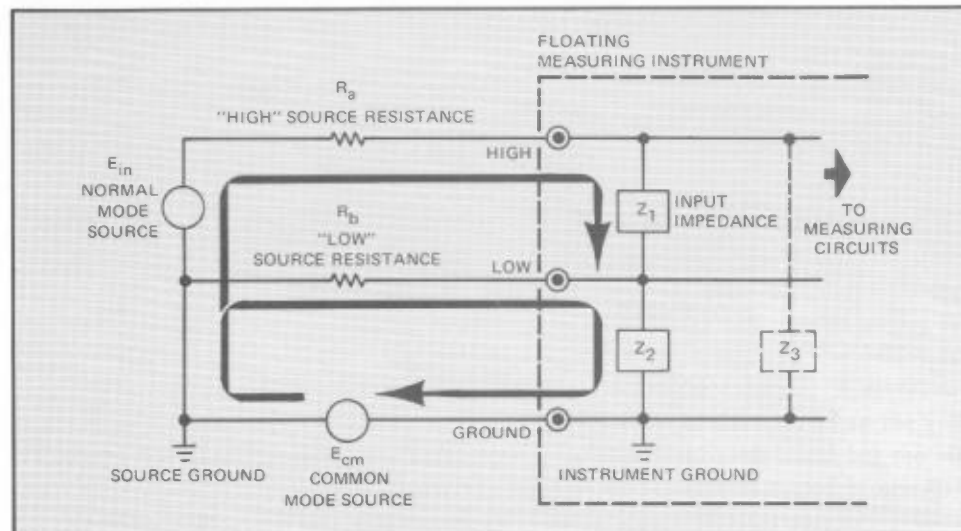


FIGURE 5. A More Realistic View of a Floating Voltmeter

Common mode current flows through the two parallel paths indicated by the heavy lines in Figure 5 and develops a voltage across R_b . The same voltage will be dropped across R_a and Z_1 , with the largest part of it dropped across Z_1 , and the meter will respond to the drop across Z_1 . Most of the common mode voltage dropped across R_b will become a normal mode offset; so the common mode errors depend almost entirely on the relationship between Z_2 and R_b . If R_b is much smaller than Z_2 the errors will be small. R_b is just lead resistance in most measurements and Z_2 is an isolation impedance between two metallic chassis, amounting to $10^8 - 10^{10} \Omega$ shunted by anywhere from a few thousand pF to a few tenths of a μF . At dc, Z_2 is much higher than R_b , but it falls off gradually with frequency, resulting in poorer immunity to common mode signals at higher frequencies. Also, Z_2 is very dependent on environment. High humidity and just a slight amount of dust or other contamination on the chassis can cause Z_2 to drop by a factor of several thousand or more, which will increase common mode effects by a factor of several thousand.

A floating meter like the one in Figure 5 can reduce the effects of common mode voltages by anywhere from 80 dB to 120 dB at dc or from 60 dB to 100 dB at line frequency, if the resistance in the low lead can be kept low and the environment can be kept both clean and dry. Such an instrument has enough common mode immunity for analog measurements or measurements made on a three digit or perhaps four-digit digital voltmeter. For measurements requiring higher resolution or sensitivity it may not be adequate. As an example, consider measuring the output of a circuit like a precise strain gage or thermocouple bridge circuit with a full scale output of less than 100 mV. A bridge circuit inherently has a high value for R_b , as much as several k Ω (more on bridge circuits later), and also has more than one common mode source. Suppose the circuit to be measured has a 25 millivolt full scale output and an R_b value of 1 k Ω , and also suppose that the measuring instrument is a four-digit digital voltmeter with a 100 mV range and common mode rejection (CMR) of 100 dB for an R_b value of 1 k Ω . And finally suppose that you need at least 1% resolution—you have to resolve at least 250 μV , with a common mode voltage of 120 V.

If the common mode voltage is 120 V and the rejection is 100 dB—a factor of 10^5 —the resulting normal mode offset is 1.2 mV. The DVM just described won't make the measurement even for full scale outputs; for small outputs like 10th scale outputs, the signal is practically buried in common mode. The floating voltmeter has good CMR, but not quite good enough for this measurement; and this is a fairly common type of measurement. High resolution or high sensitivity measurements require a great deal more CMR than the floating voltmeter can offer. The only kind of instrument with sufficient rejection is the guarded instrument.

The Guarded Voltmeter

A guarded instrument has an additional shield between the low and ground, effectively increasing the low to ground leakage impedance; the extra shield is called the guard and may be connected to the circuit being measured through a "guard" terminal. The extra shield divides the low-to-ground impedance into series impedances, Z_2 and Z_3 , (See Figure 6.) increasing the resistance and decreasing the total capacitance. The resulting higher impedance improves the leakage resistance and the CMR somewhat, but the real strength of the guarded instrument comes from what the guard can do when it's properly connected to the circuit being measured.

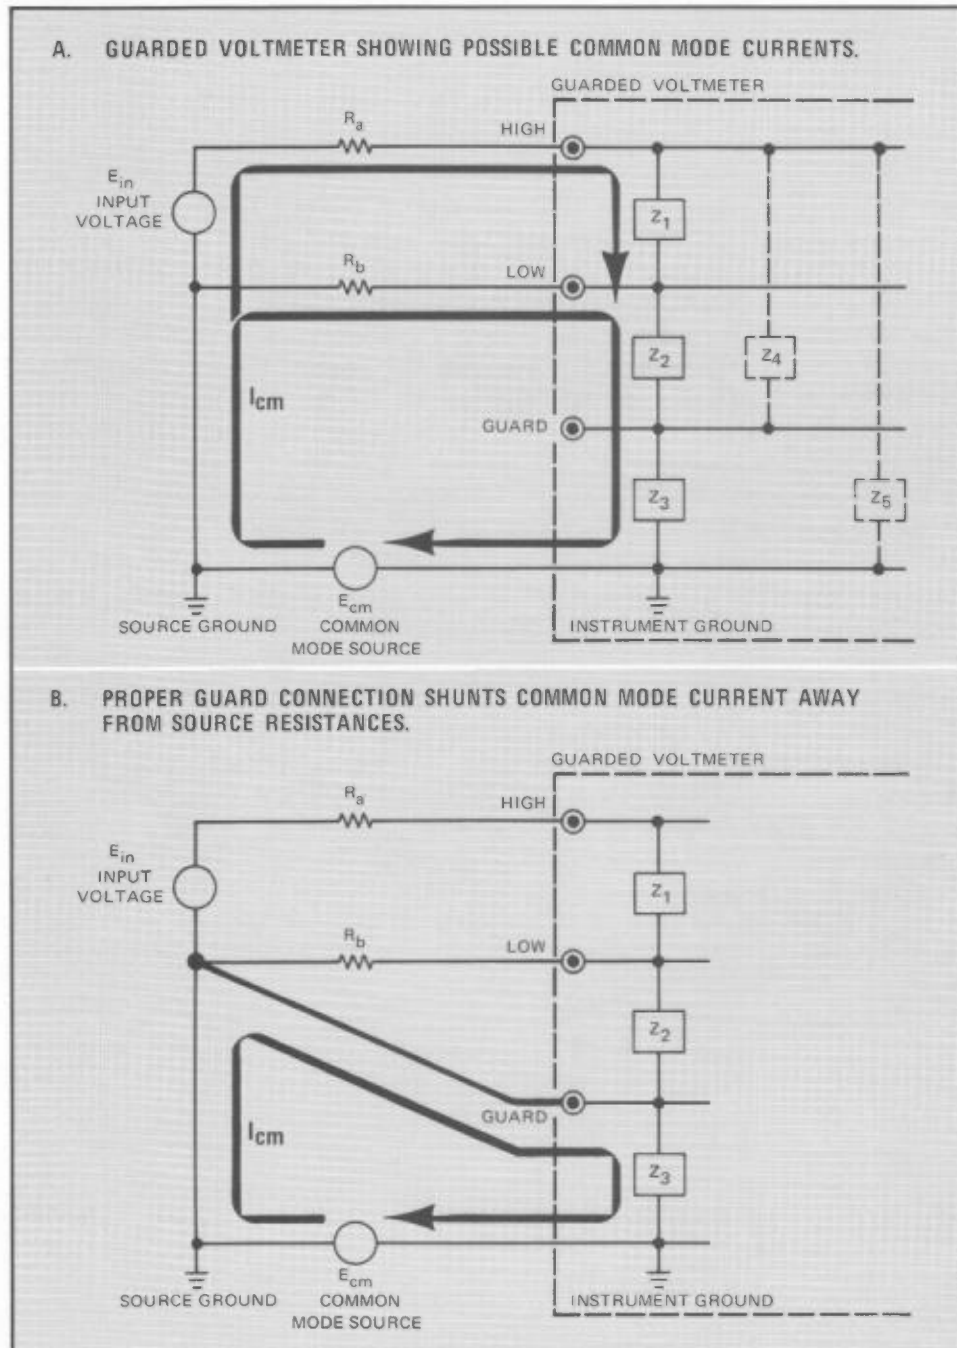


FIGURE 6. Guarded Voltmeter

Figure 6 shows how the guard works. The situation with the guard terminal disconnected (top of figure) is very similar to that of a floating voltmeter except that the low-to-ground isolation impedance is larger. Common mode current from E_{cm} could

pass through the two parallel paths shown in the figure, and again the drop across R_b results in a voltage difference across Z_1 , the common mode error. As in the case of the unguarded voltmeter, the error is very small if the isolation impedance ($Z_2 + Z_3$) is large and R_b is small. At dc the added guard shield increases the leakage impedance dramatically, especially in a dry environment. But at line frequency the added shield only increases leakage impedance slightly. The result is a marked improvement in CMR at dc and only a slight improvement at higher frequencies.

When the guard is properly connected, as shown in the bottom of Figure 6, it shunts the common mode current around the two current paths shown at the top of the Figure and just about eliminates R_b and R_a from the common mode circuit; virtually no common mode current goes through R_b , so it can't cause much error. Also since low and guard are at nearly the same voltage, the voltages at the top and bottom of Z_2 are nearly equal. And as long as the voltage difference across Z_2 is held very small, very little current can flow through it. The guard connection improves the common mode rejection significantly over a wider range of common mode frequencies, so that rejection doesn't fall off nearly as rapidly. A good guarded voltmeter will reject common mode signals by more than 160 dB at dc and more than 140 dB at line frequency. There are two relatively simple rules to follow to connect the guard like it's connected in Figure 6.

THE GUARD CONNECTION

1. Connect guard so that it and the low terminal are at the same voltage, or as close to the same voltage as possible.
2. Connect guard so that no common mode current, or guard current, flows through any of the low source resistance, or more generally, so that no common mode current flows through any resistance that determines the input voltage.

And that's all there is to it. So it appears that our discussion of guard and how to use it might just end here. We've defined common mode and normal mode and floating measurements and guard and shown how they work and how the guard should be connected . . . That's only the beginning. There are very few measurements, if any at all, where the guard can be connected as we've shown. Usually one or the other of the two rules will be violated, sometimes both of them will. Sometimes you won't know for sure. Now we have to look at the tradeoffs and approximations one makes to minimize common mode effects in a real measurement.

CONNECTING THE GUARD

A Simple Example

The Best Connection

First we'll take a very simple but real measurement where the two rules just about fit and then show what happens when the rules are violated. For example, consider a guarded digital voltmeter measuring the output of a floating electronic power supply (Figure 7). The power supply has high internal gain and good regulation, making R_a and R_b in this measurement almost entirely due to lead resistance. According to the two rules the best way to connect the guard is as shown in the top example in Figure 8; guard is at practically the same potential as low, and no common mode current passes through any of the high or low source impedances.

Some Alternative Connections

Figure 7 also shows the alternative guard connections. In the second example guard is connected to low right at the voltmeter's front panel using the guard-low shorting bar provided on most instruments. This is a good approximation to the first connection and appears to be easier. Low and guard are at almost exactly the same voltage, so Z_2 is kept very high; but all of the common mode current goes through R_b , and any drop across R_b will cause a normal mode offset and an error. In systems measurements where the leads can be extra long R_b becomes more significant and connecting guard to low at the instrument can cause significant errors. Use this connection only when the leads are short and when the leads are the only resistance included in R_b .


The third example shows what happens when guard is connected to ground. If guard is connected to "instrument ground" at the voltmeter (dotted connection) the guard connection shorts out Z_3 and puts guard and ground at the same potential and eliminates the shunt path for common mode current. All the common mode current goes through R_b and the common mode current that goes through R_b is higher than it might be because Z_3 is shorted. But more important . . . most guarded instruments have lower breakdown voltage ratings between low and guard than they have between low and ground, and most of the common mode is applied between low and guard. Common mode voltages often amount to several hundred volts and the common mode could easily be greater than the low to guard breakdown rating. *So don't connect guard to ground at the instrument . . . doing so may damage your instrument.*

Connecting guard to ground can be a good connection if the connection is made *at the source* and if most of the common mode exists between the point where the source is grounded and the point where the meter is grounded. Then the guard connection shunts most of the common mode around R_b and low and guard are at nearly the same voltage. But any common mode voltages generated within the source won't be affected by the guard and their currents will go through R_b .


Don't Leave The Guard Open

Just about any connection is better than leaving the guard open. Any connection that diverts any of the common mode current from R_b or brings low and guard closer to the same voltage will improve your CMR. Leaving the guard open may damage your instrument. The breakdown rating between low and guard is lower than the one between low and ground, less than 300 V for most instruments and sometimes as low as 50 V. If the guard is left open the common mode voltage will divide between the low to guard impedance (Z_2) and the guard to ground impedance (Z_3), and since they are about the same size about half the common mode will drop between low and guard. Large common mode voltages could easily drop enough between low and ground to exceed the breakdown rating.

A. BEST CONNECTION - GUARD CONNECTED TO LOW AT SOURCE.

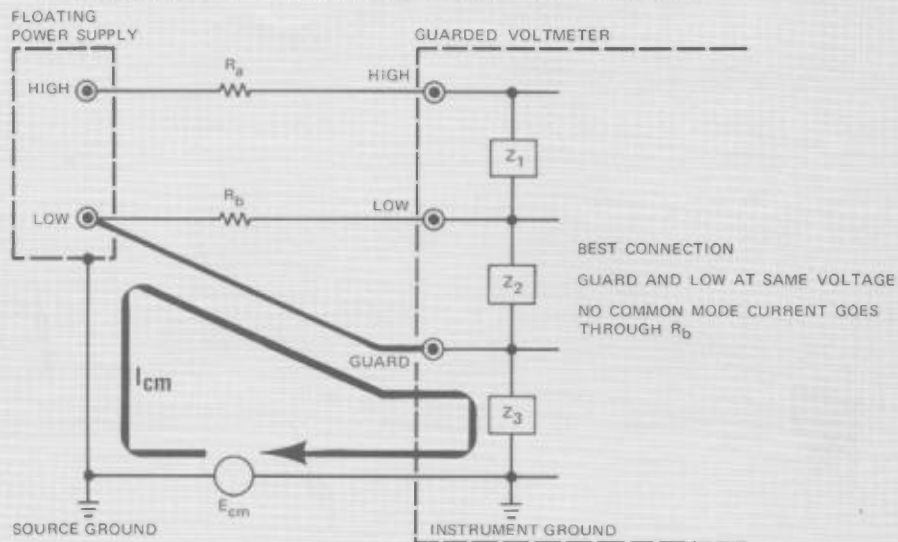

B. GUARD CONNECTED TO LOW AT VOLTmeter.

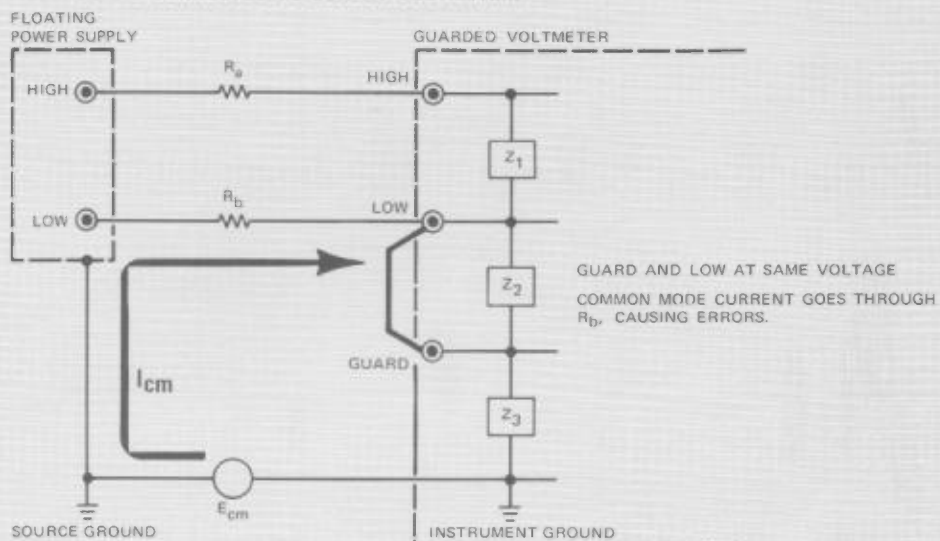

C. GUARD CONNECTED TO EARTH GROUND.

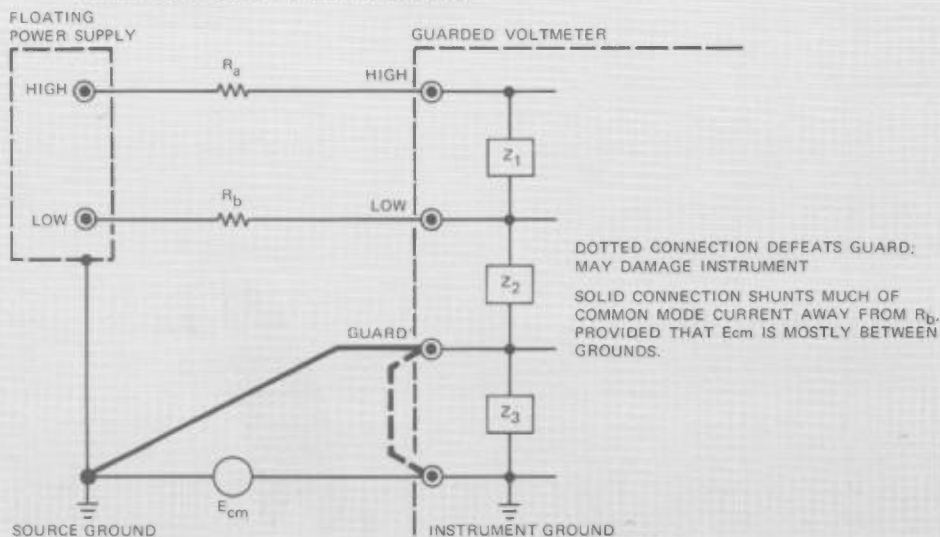


FIGURE 7. Connecting the Guard

THE BRIDGE MEASUREMENT

A More Complicated Example

The bridge measurement shown in Figure 8 is especially important in instrumentation and is a good example because it contains about every kind of common mode complication a measurement can have. It gives high resolution and sensitivity for small voltages and frees the measurement from the need of precise voltage references. But a bridge is also especially susceptible to common mode effects. Both sides of the bridge are operated above ground, so no matter how the voltmeter or detector is connected it's floating. Also, a great many bridge measurements are made with the bridge and the voltmeter separated by large distances, resulting in common mode signals induced from ground currents and ground differences. And some of these ground-related common mode signals can amount to several hundred volts.

... then a bridge measurement should be made with a guarded voltmeter. But where should the guard be connected? The equivalent circuit (also in Figure 8) shows that R_b , the low source resistance, is the parallel combination of R_2 and R_4 and that there are two common mode sources. One is the E_{cm} , the ground-related common mode source, and the other is E_{R4} , the voltage across R_4 . If guard is to be connected according to the rules, it must go to the source side of R_b as shown the equivalent circuit. Then guard and low are at the same potential and no guard current passes through any source resistances.


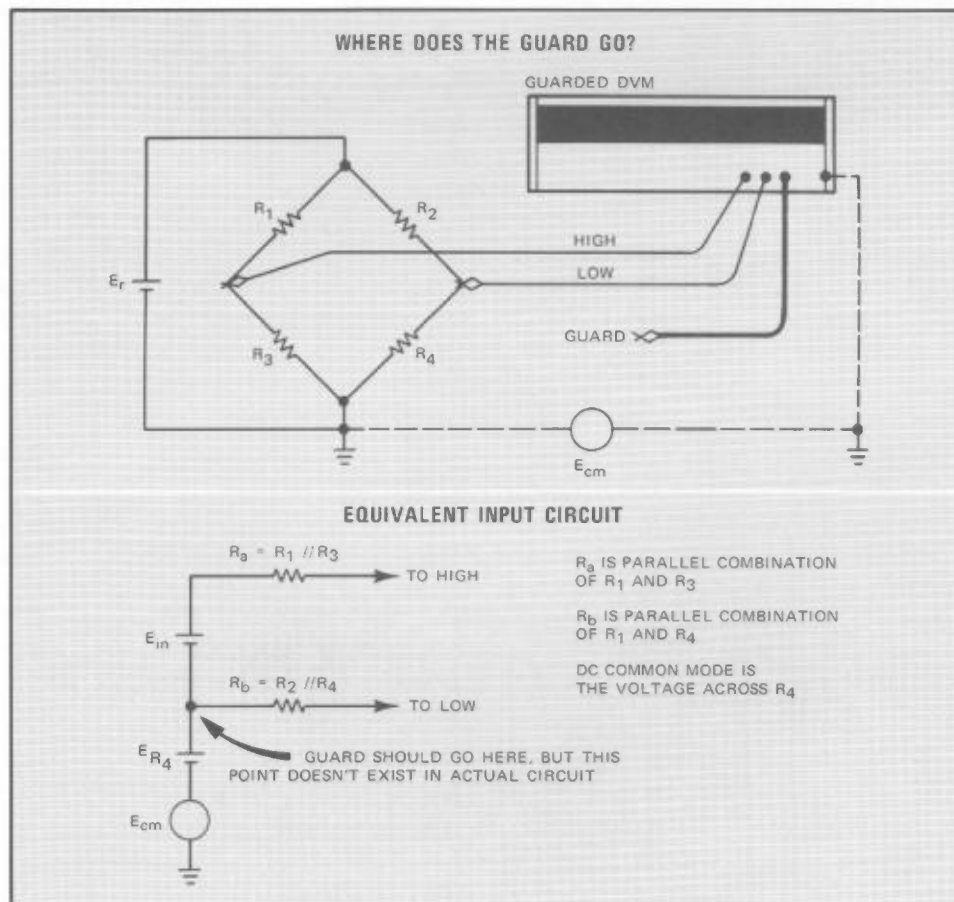


FIGURE 8. The Bridge Measurement


But the point where guard is connected in the equivalent circuit doesn't exist in the actual circuit. Guard must be connected somewhere else. There are three possible choices, shown in Figure 9. First, it can be connected to low, right at the voltmeter front panel, using the shorting bar. This puts low and guard at the same potential, but lets all the common mode current from both sources flow through all the source resistances and through the lead resistances, possibly causing some large offsets.

GUARD CONNECTED TO LOW AT THE VOLTMETER INPUT

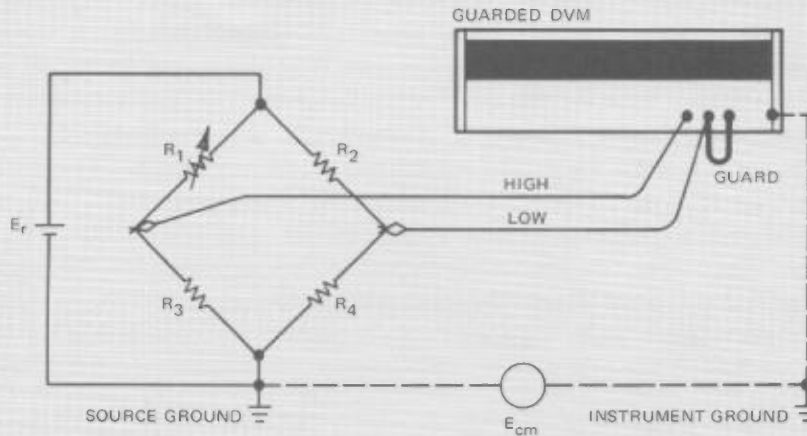


ALL COMMON MODE CURRENT GOES THROUGH SOURCE RESISTANCE, CAUSING OFFSETS

GUARD CONNECTED TO LOW AT THE BRIDGE

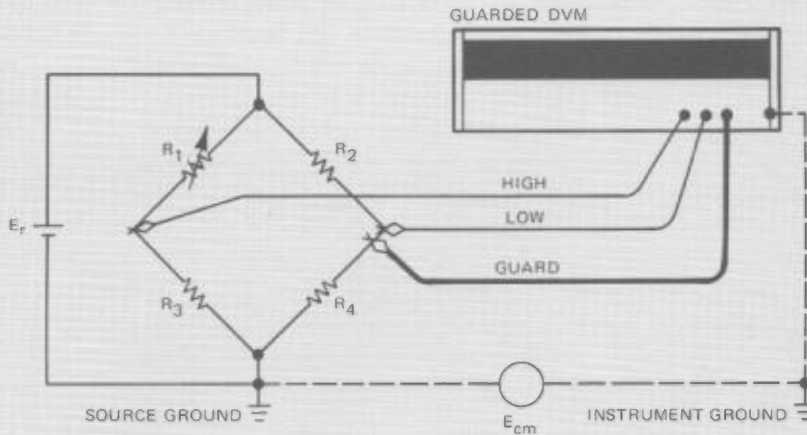

COMMON MODE CURRENT FROM R_4 IS SHUNTED AROUND LEAD RESISTANCES
COMMON MODE CURRENT FROM E_{cm} GOES THROUGH SOURCE RESISTANCE CAUSING LARGE OFFSETS

GUARD CONNECTED TO GROUND AT THE BRIDGE

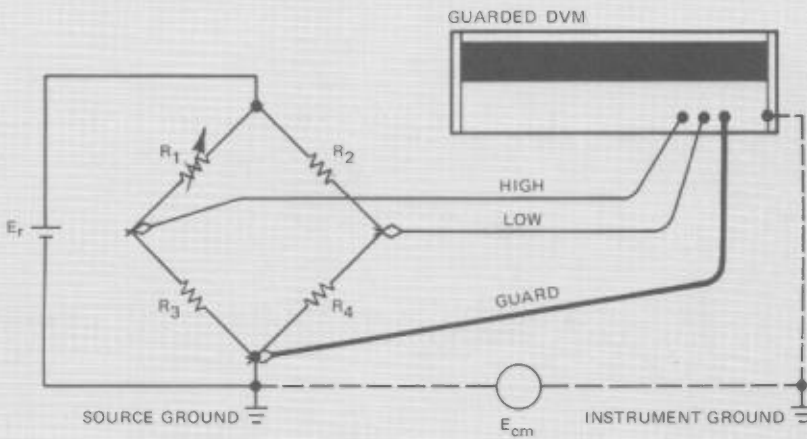

BEST CONNECTION
LARGEST PART OF COMMON MODE CURRENT SHUNTED AWAY FROM SOURCE RESISTANCES
GUARD AND LOW NEARLY AT SAME VOLTAGE IF DRIVE VOLTAGE IS SMALL

FIGURE 9. Alternative Guard Connections for the Bridge Circuit

The second possible connection is about the same as the first except that guard is connected to low at the bridge instead of at the voltmeter, removing the effects of common mode currents through the lead resistances. In the case where the bridge resistors were all small and the leads were very long this might be an acceptable solution, but common mode currents still flow through part of the source resistance.

The third connection keeps the ground-related part of the common mode current out of the source resistance but puts low and guard at different voltages. If the ground-related common mode source is much larger than the dc common mode source, and it usually is, this connection removes most of the common mode current from the source resistances. And precise instrumentation bridges, particularly strain gage bridges, are usually operated at low voltages, so the voltage across R_4 is small making the difference between low and guard small. For most cases, then, the third connection is the best of the three, particularly when the ground related common mode is high and the dc common mode is small.

There are some cases, though, where the bridge is operated at high voltage and the ground-related common mode voltages are not so large; then the third connection doesn't work as well. There is another approach to the bridge problem that can be particularly effective in situations where none of the other connections work too well. It's called driving the guard and is shown in Figure 10. It uses another circuit, a voltage divider, to provide the proper guard potential. R_5 and R_6 are connected across the same supply as the bridge supply and are mounted close to the bridge so that their ground is the same as the bridge ground. Their values are selected so that the voltage at the top of R_6 is equal to the voltage at the top of R_4 where low is connected, and so that the total resistance through R_5 and R_6 is less than a tenth of the resistance through the bridge. Then guard and low are at the same potential and most (more than 90%) of the common mode current flows through R_6 and the guard, around the source resistances. R_5 and R_6 could be selected so that only a very small percentage of the common mode current goes through R_5 and R_6 ; the only limitation is the amount of loading the E_r supply can stand.

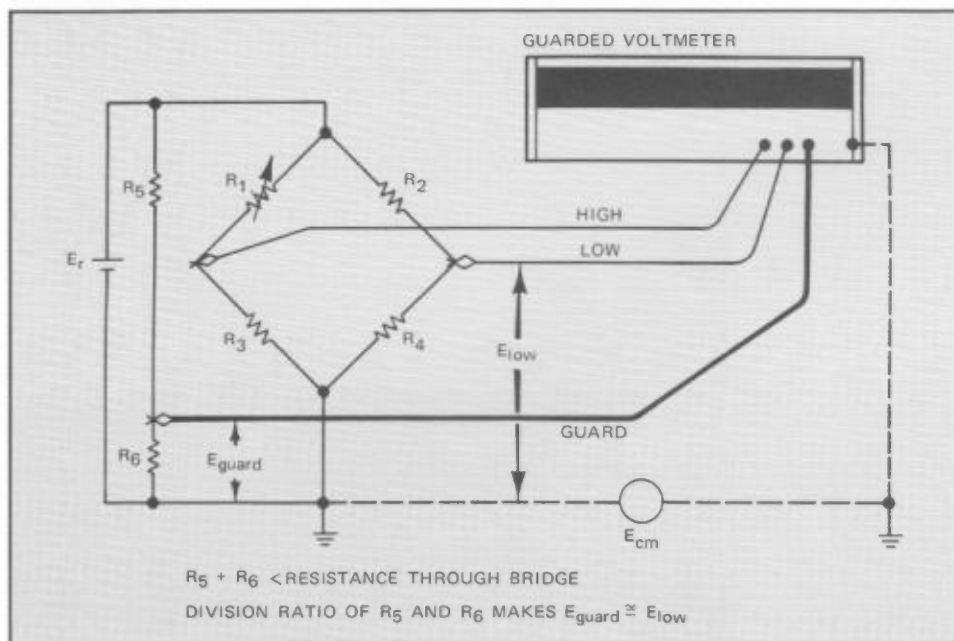


FIGURE 10. Driving the Guard in a Bridge Measurement

A SPECIAL CASE The Balanced Guarded Voltmeter

Some guarded voltmeters are built so that the impedance from low to guard and the impedance from high to guard are just about equal. Then the guarded voltmeter is

similar to the ideal balanced and floating voltmeter back in Figure 3. Its common mode errors are proportional to the difference between R_a and R_b rather than just on R_b . Making R_a and R_b equal will minimize common mode errors. The guard on a balanced guarded instrument is connected in exactly the same manner as the guard on an ordinary guarded voltmeter.

Such instruments are especially useful in systems where long leads are the largest part of the source resistance, because the two leads in a given measurement are often the same length and diameter and made of the same material, making R_a and R_b nearly equal. They are also helpful in bridge measurements because the high and low source resistances of a bridge, although high, are often nearly equal.

INJECTED CURRENTS Another Complication

Not all common mode problems come from the circuit being measured. Some common mode sources are within the measuring instruments, caused by currents induced into the ground or guard shields by the power transformer windings. Internal common mode sources are generally constant current sources and force "injected currents" into the circuit being measured. They appear in virtually all line-operated floating instruments, between low and ground in the unguarded instruments and between low and guard in the guarded instrument. Figure 11 shows the results.

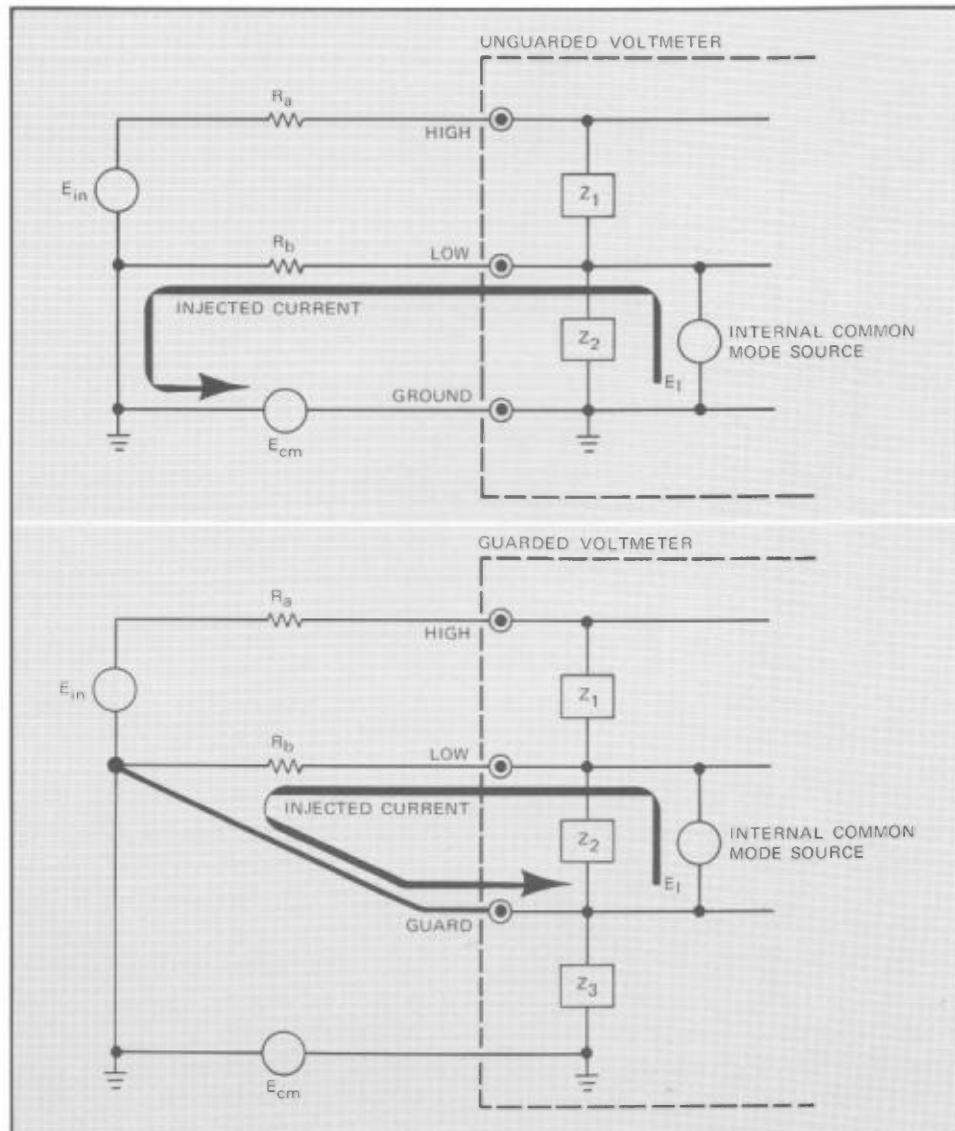


FIGURE 11. Internal Common Mode Sources in a Guarded and Unguarded Instrument

In the unguarded instrument (top of Figure 11) the injected current flows out of the low terminal, through the low source resistance, and back to ground, dropping a voltage across R_b . The result is an offset in the reading. The only thing that can be done to cut down the effect of injected current is to install a fairly large capacitor between low and ground in the instrument. Such a capacitor would shunt the injected current around the source resistance, but if it were too large it would degrade Z_2 seriously and ruin the instrument's ac CMR. Most unguarded floating voltmeters have a capacitor in the $0.01 \mu\text{F}$ range already installed. The value is selected to maximize ac CMR while minimizing the effects of injected current and results in a tradeoff between the two.

In the guarded instrument the injected current goes out the low terminal, through R_b , and back into the guard terminal, again causing an offset in the reading. But note that the injected current only goes through R_b if the guard is properly connected. If the guard were connected someplace else, to the low terminal right at the front panel, for example, the injected currents would not go through R_b . So connecting guard to maximize CMR also maximizes the effects of injected current. And connecting it to minimize injected current effects cuts down on the CMR.

The situation isn't as bad as it looks. First, guarded voltmeters have much less injected current than unguarded ones, usually only 50 to 100 pA. Then, injected currents are always at line frequency where most voltmeters have very good normal mode rejection. So the voltmeter's response to injected currents will be low, especially if the voltmeter is an integrating DVM with nearly infinite noise rejection at line frequency. Also, if R_b is small, the low and guard terminals can be connected right at the instrument without much loss in CMR. And then, if the input voltage can be set to zero or shorted out while the guard is connected properly, the offset due to injected currents can be read on the voltmeter's display and used as correction, or perhaps eliminated altogether with a zero adjustment. And finally, injected current can be measured directly by connecting a small-valued resistor between low and guard and measuring the voltage across it. The measured value can then be used to estimate the resulting offset if R_b can be estimated.

A FEW WORDS ABOUT SPECIFICATIONS

CMR specifications are figures of merit; they are useful for comparing the CMR capabilities of two instruments; but they won't predict how much common mode error a given measurement will have. And they won't tell if a given instrument meets the requirements of a given measurement unless a great deal is already known about the measurement, because common mode errors are so dependent upon the characteristics of the measurement and on how the instrument is connected. Fortunately there is some uniformity among manufacturers and there are only two basic ways of specifying CMR. One is to specify "true" common mode rejection, and the other is to specify "effective" common mode rejection.

Both methods have two things in common. First, CMR is specified with the guard connected properly, according to the two rules on page 7; and second, CMR is specified with a given value of either R_b or the difference between R_a and R_b , usually $1 \text{ k}\Omega$. Most manufacturers do not explicitly state whether or not the voltmeter is balanced, and the CMR is specified "with a $1 \text{ k}\Omega$ unbalance in either lead". This expression means that if the instrument is balanced, the CMR is specified with $1 \text{ k}\Omega$ difference between R_a and R_b regardless of which is larger, and if the instrument is unbalanced the CMR is specified with $1 \text{ k}\Omega$ in the low lead since that's the worst case. Since the specifications don't tell if the instrument is balanced, the CMR should be checked with a $1 \text{ k}\Omega$ resistor in the low lead (more on checking CMR later).

True CMR, or "pure" CMR, is the ratio (in dB) of the common mode signal to the normal mode signal it produces with a $1 \text{ k}\Omega$ unbalance in either the high or low lead. It is an indication of the inherent rejection ability of the basic instrument and does not include the effects of any noise rejection capabilities of the measuring circuits. It is especially important when the input is to be connected to other instruments. For example, if the input must go to an amplifier in parallel, the true CMR gives an idea of how much common mode offset will appear on the amplifier input.

Effective CMR is the ratio (in dB) of the common mode signal to its resulting effect on the measured value or readout with a 1 k Ω unbalance. It combines the true CMR effects with the instrument's noise rejection capabilities, and is usually the most important specification, because it directly indicates how common mode signals affect the measured value. Figure 12 shows how true CMR and noise rejection combine to make an effective CMR specification. The instrument used is an integrating dc digital voltmeter so it has points of extremely high noise rejection whenever the noise period is the same as the integration period. Notice that at dc the true and effective CMR are the same; the instrument has no noise rejection at low frequencies, so effective CMR falls off the same as the true CMR until about 2 Hz when the voltmeter's noise rejection takes effect. After that the effective CMR is the sum of the two effects. If one CMR specification and the noise rejection specification are known, then the other CMR specification can be derived by addition or subtraction.

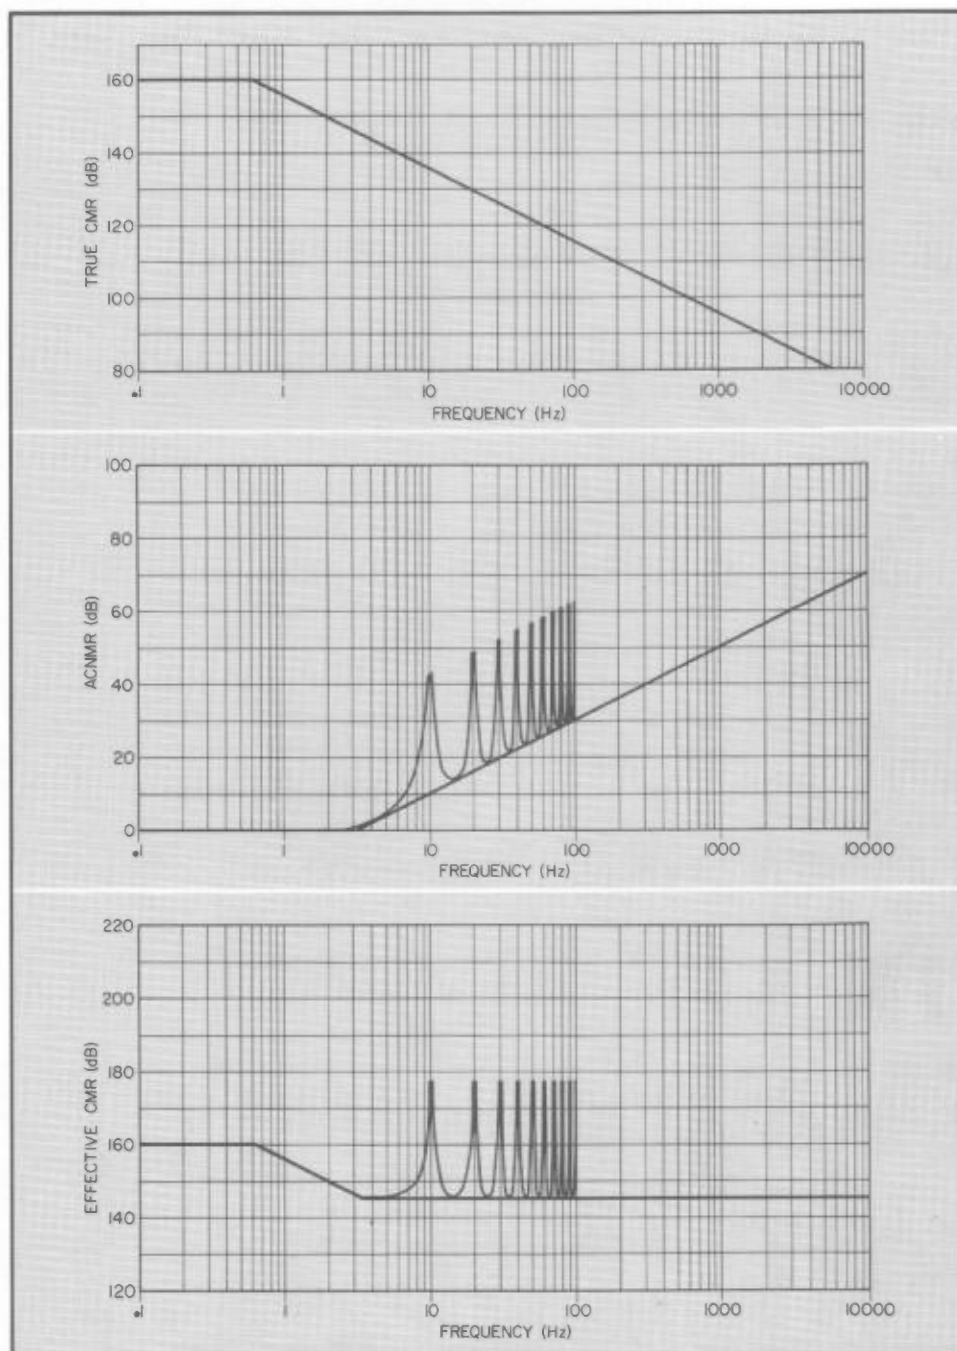


FIGURE 12. Relationship Between True CMR and Effective CMR

Both true and effective CMR are generally specified with a 1 k Ω unbalance; this is just an accepted convention . . . any value could have been used. But a different value of unbalance will result in a different value of CMR; the larger the unbalance the worse the CMR and vice versa. And the relationship is linear. So an instrument specified as having CMR of 180 dB with 100 Ω unbalance is the same as an instrument specified as 160 dB with 1 k Ω unbalance.

The amount of common mode voltage an instrument can accommodate is not often specified, but is very important, because exceeding recommended levels may damage the instrument. Most instruments can operate with 500 to 700 volts between guard and ground and with anywhere from 50 to 300 volts between low and guard. The low-to-guard voltage isn't as critical because the instrument, when connected properly, should have low and guard at the same potential.

MEASURING COMMON MODE REJECTION

Figure 13 shows effective CMR checks and true CMR checks for both a floating unguarded voltmeter and a guarded voltmeter. In each case the measurements are made

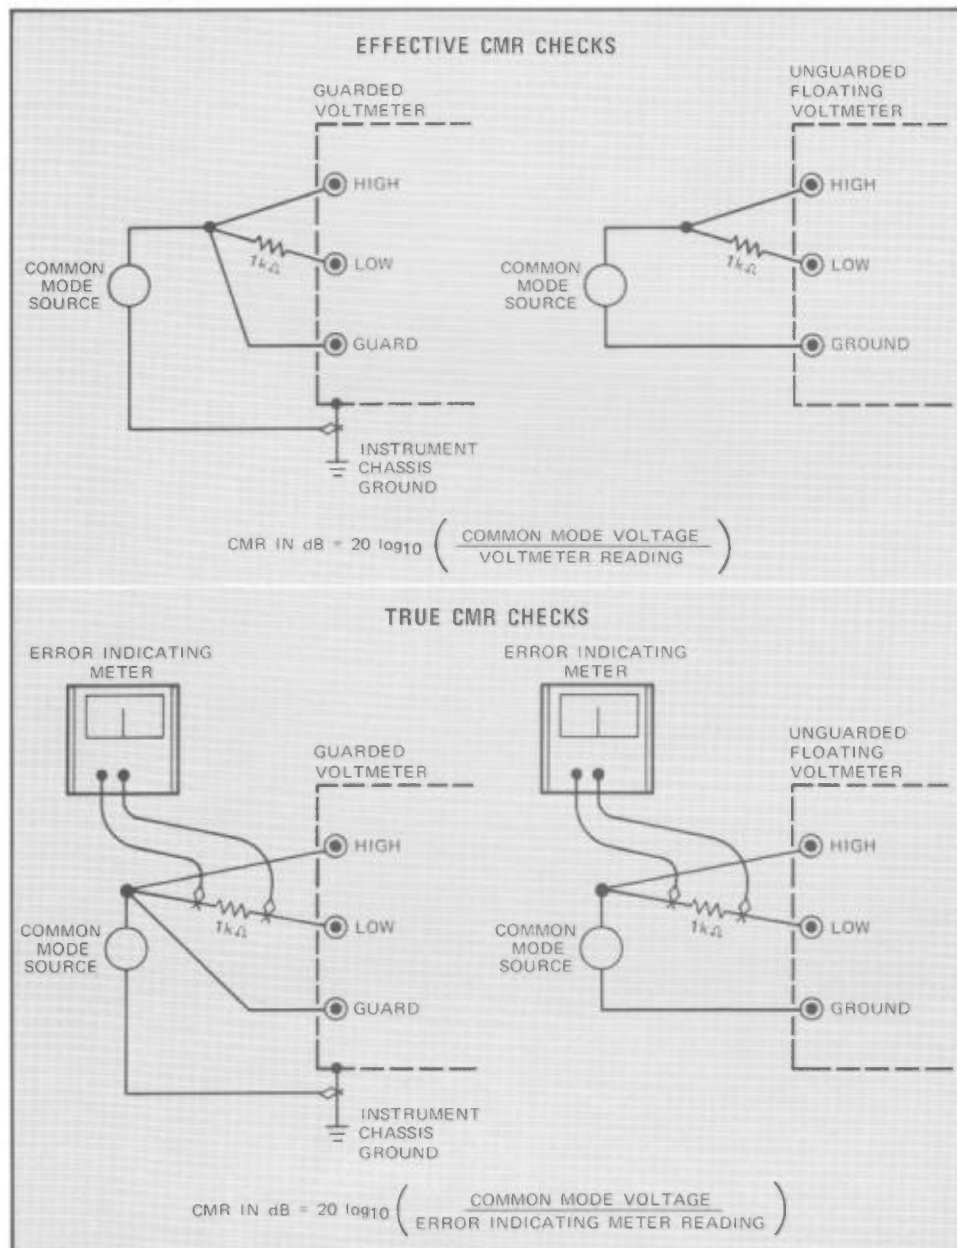


FIGURE 13. Common Mode Rejection Checks

with a 1 k Ω unbalance resistor and with the resistor placed in the low lead. These checks can be used to determine if the instrument is balanced by doing the check with the unbalance in the low lead and then with the unbalance in the high lead and noting any differences. If the two CMR values are equal the instrument is balanced.

The effective CMR check is the simplest and the most usable because it uses the instrument's readout to indicate CMR errors. The source is first a dc supply and then a variable frequency oscillator with a frequency range up to about 1 kHz. When checking instruments with very high CMR (~ 160 dB) it's hard to get an indication on the meter readout without using dangerously high voltages. Then it's a good idea to increase the value of the unbalance resistor in order to get greater CMR errors. Remember that CMR varies inversely with the value of the resistor.

The true CMR check is somewhat more difficult because an additional "error indicating meter" must be used to directly measure the normal mode offset generated by the common mode source. The meter used must be floating, preferably battery-operated, and should have enough sensitivity to read the normal mode offsets. If it hasn't enough sensitivity, the normal mode offset can be made larger by increasing the unbalance resistor. Try to make true CMR checks with the voltmeter turned off in order to completely eliminate any effects of its normal mode rejection. This isn't always possible, though, because some instruments have their inputs disconnected when they're turned off.

AND IN CONCLUSION

Guarded instruments will solve most common mode problems if they are connected according to the two basic rules (1) always have guard and low at the same voltage, and (2), make sure that no common mode current passes through any source resistance. You'll find in many cases it's impractical or impossible to satisfy both rules. It's not as easy as it seems. But, look your measurement over and come as close as possible. Remember that the effectiveness of a guarded instrument depends on how it's connected . . . so use the guard . . . improve your common mode rejection.

WIG

SALES & SERVICE OFFICES

UNITED STATES

ALABAMA

P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA

3009 North Scottsdale Road
Scottsdale 85251
Tel: (602) 945-7601
TWX: 910-950-1282

5737 East Broadway
Tucson 85716
Tel: (602) 298-2313
TWX: 910-952-1162

CALIFORNIA

1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2220 Watt Ave.
Sacramento 95825
Tel: (916) 482-1463
TWX: 910-367-2092

1055 Shafter Street
San Diego 92106
Tel: (714) 223-8103
TWX: 910-335-2000

COLORADO

7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT

508 Tolland Street
East Hartford 06108
Tel: (203) 289-9394
TWX: 710-425-3416

DELAWARE

111 East Avenue
Newark 06851
Tel: (203) 853-1251
TWX: 710-468-3750

FLORIDA

P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX: 510-955-4099

P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

P.O. Box 8128
Madeira Beach 33708
410 150th Avenue
St. Petersburg
Tel: (813) 391-0211
TWX: 810-863-0366

GEORGIA

P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

ILLINOIS

5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA

3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA

P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-0850

P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS

32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-326-6904

MICHIGAN

24315 Northwestern Highway
Southfield 48075
Tel: (313) 353-9100
TWX: 810-224-4882

MINNESOTA

2459 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI

11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

2812 South Brentwood Blvd.
St. Louis 63144
Tel: (314) 962-5000
TWX: 910-760-1570

NEW JERSEY

W. 120 Century Road
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

1060 N. Kings Highway
Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-892-4945

NEW MEXICO

P.O. Box 8366
Station C
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 265-3713
TWX: 910-989-1665

NEW YORK

1702 Central Avenue
Albany 12205
Tel: (518) 869-8462
TWX: 710-441-8270

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

1025 Northern Boulevard
Roslyn, Long Island 11576
Tel: (516) 869-8400
TWX: 510-223-0811

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

NORTH CAROLINA

P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX: 510-926-1516

OHIO

25575 Center Ridge Road
Cleveland 44145
Tel: (216) 835-0300
TWX: 810-427-9129

3460 South Dixie Drive
Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

1120 Morse Road
Columbus 43229
Tel: (614) 846-1300

OKLAHOMA

2919 United Founders Boulevard
Oklahoma City 73112
Tel: (405) 848-2801
TWX: 910-830-6862

OREGON

Westhills Mall, Suite 158
4475 S.W. Scholls Ferry Road
Portland 97225
Tel: (503) 292-9171
TWX: 910-464-6103

PENNSYLVANIA

2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

RHODE ISLAND

873 Waterman Ave.
East Providence 02914
Tel: (401) 434-5535
TWX: 710-381-7573

TEXAS

P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

UTAH

2890 South Main Street
Salt Lake City 84115
Tel: (801) 487-0715
TWX: 910-925-5681

VERMONT

P.O. Box 2287
Kennedy Drive
South Burlington 05401
Tel: (802) 658-4455
TWX: 910-658-4712

VIRGINIA

P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX: 710-956-0157

WASHINGTON

433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

*WEST VIRGINIA

Charleston
Tel: (304) 768-1232

P.O. Box 22813
6300 Westpark Drive
Suite 100
Houston 77027
Tel: (713) 781-6000
TWX: 910-881-2645

231 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH

2890 South Main Street
Salt Lake City 84115
Tel: (801) 487-0715
TWX: 910-925-5681

VERMONT

P.O. Box 2287
Kennedy Drive
South Burlington 05401
Tel: (802) 658-4455
TWX: 910-658-4712

VIRGINIA

P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX: 710-956-0157

WASHINGTON

433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

*WEST VIRGINIA

Charleston
Tel: (304) 768-1232

FOR U.S. AREAS NOT LISTED:

Contact the regional office nearest you: Atlanta, Georgia... North Hollywood, California... Paramus, New Jersey... Skokie, Illinois. Their complete addresses are listed above.

*Service Only

CANADA

ALBERTA

Hewlett-Packard (Canada) Ltd.
11745 Jasper Ave.
Edmonton
Tel: (403) 482-5561
TWX: 610-831-2431

BRITISH COLUMBIA

Hewlett-Packard (Canada) Ltd.
1037 West Broadway
Vancouver 12
Tel: (604) 731-5301
TWX: 610-922-5059

MANITOBA

Hewlett-Packard (Canada) Ltd.
511 Bradford Ct.
St. James
Tel: (204) 786-7581
TWX: 610-671-3531

NOVA SCOTIA

Hewlett-Packard (Canada) Ltd.
2745 Dutch Village Rd.
Suite 203
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO

Hewlett-Packard (Canada) Ltd.
880 Lady Ellen Place
Ottawa 3
Tel: (613) 722-4223
TWX: 610-562-1952

Hewlett-Packard (Canada) Ltd.
50 Galaxy Blvd.
Rexdale
Tel: (416) 677-9611
TWX: 610-492-4246

QUEBEC

Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-20607

FOR CANADIAN AREAS NOT LISTED:

Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

CENTRAL AND SOUTH AMERICA

ARGENTINA

Hewlett-Packard Argentina
S.A.C.e.I.
Lavalle 1171 - 3°
Buenos Aires
Tel: 35-0436, 35-0627, 35-0431
Telex: 012-1009
Cable: HEWPACKARG

BRAZIL

Hewlett-Packard Do Brasil
I.e.C. Ltda.
Rua Coronel: Oscar Porto, 691
Sao Paulo - 8, SP
Tel: 288-7111
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil
I.e.C. Ltda.
Avenida Franklin Roosevelt 84-
grupo 203
Rio de Janeiro, 20-39, GB
Tel: 232-9733
Cable: HEWPACK Rio de Janeiro

CHILE

Héctor Calcagni y Cia, Ltda.
Bustos, 1932-3er Piso
Casilla 13942
Santiago
Tel: 4-2396
Cable: Calcagni Santiago

COLOMBIA

Instrumentacion
Henrik A. Langebaek & Kier
Ltda.
Carrera 7 No. 48-59
Apartado Aereo 6287
Bogota, 1 D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogota
Telex: 044-400

COSTA RICA

Lic. Alfredo Gallegos Gudián
Apartado 3243
San José
Tel: 21-85-13
Cable: GALGUR San José

ECUADOR

Laboratorios de Radio-Ingeniería
Calle Guayaquil 1246
Post Office Box 3199
Quito
Tel: 12496
Cable: HORVATH Quito

EL SALVADOR

Electrónica
Apartado Postal 1589
27 Avenida Norte 1133
San Salvador
Tel: 25-74-50
Cable: ELECTRONICA
San Salvador

GUATEMALA

Olander Associates Latin America
Apartado Postal 1226
Ruta 4, 6-53, Zona 4
Guatemala City
Tel: 63958
Cable: OLALA Guatemala City

JAMAICA

General Engineering Services,
P.O. Box 4929
27 Dunrobin Ave.
Kingston
Tel: 42657
Cable: GENSERV

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
Moras 439
Col. del Valle
Mexico 12, D.F.
Tel: 5-75-46-49

NICARAGUA

Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA

Electrónica Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 30833
Cable: ELECTRON Panama City

PERU

Fernando Ezeta B.
Avenida Petit Thouars 4719
Miraflores
Casilla 3061
Lima
Tel: 45-2335
Cable: FEPERU Lima

PUERTO RICO

San Juan Electronics, Inc.
P.O. Box 5167
Ponce de Leon 154
Pda. 3-Pta. de Tierra
San Juan 00906
Tel: (809) 725-3342
Cable: SATRONICS San Juan
Telex: SATRON 3450 332

URUGUAY

Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA

Hewlett-Packard De Venezuela
C.A.
Apartado 50933
Caracas
Tel: 71.88.05, 71.88.69, 71.99.30
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT:

Hewlett-Packard
INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8461

EUROPE

AUSTRIA

Unilabor GmbH
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33
Vienna A-1095
Tel: (222) 42 61 81, 43 13 94
Cable: LABORINSTRUMENT
Vienna
Telex: 75 762

BELGIUM

Hewlett-Packard Benelux S.A.
348 Boulevard du Souverain
Brussels 1160
Tel: 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

DENMARK (May 70)

Hewlett-Packard A/S
Datavej 38
DK-3460 Birkerød
Tel: (01) 81 66 40
Cable: HEWPAC AS
Telex: 66 40

EASTERN EUROPE

Hewlett-Packard S.A. Conf.
Korrespondenz Büro Für Ost-Europa
(Czechoslovakia, Hungary, Poland, DDR, Rumania, Bulgaria)
Innsbrasse 23
Postfach
A-1204 Vienna, Austria
Tel: (222) 33 66 06
Cable: HEWPAC Vienna

FINLAND

Hewlett-Packard Oy
Bulevardi 26
P.O. Box 12185
Helsinki 12
Tel: 13-730
Cable: HEWPACQY-Helsinki
Telex: 12-1563

FRANCE

Hewlett-Packard France
Quartier de Courtabouef
Boite Postale No. 6
91 Orsay
Tel: 920 88 01
Cable: HEWPACK Orsay
Telex: 60048

Hewlett-Packard France
4 Quai des Etoiles
69 Lyon 5ème
Tel: 42 63 45
Cable: HEWPAC Lyon
Telex: 31617

GERMANY

Hewlett-Packard Vertriebs-GmbH
Lietzenburgerstrasse 30
1 Berlin 30
Tel: (0811) 211 60 16
Telex: 18 34 05

Hewlett-Packard Vertriebs-GmbH
Herrenbergerstrasse 110
703 Böblingen, Württemberg
Tel: 07031-6671
Cable: HEPAG Böblingen
Telex: 72 65 739

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 Düsseldorf 1
Tel: 68 52 58/59
Telex: 85 86 533

Hewlett-Packard Vertriebs-GmbH
Berliner Strasse 117
6 Nieder-Eschbach/Frankfurt 56
Tel: (0611) 50 10 64
Cable: HEWPACSA Frankfurt
Telex: 41 32 49

Hewlett-Packard Vertriebs-GmbH
Beim Strohhause 26
2 Hamburg 1
Tel: 24 05 51/52
Cable: HEWPACSA Hamburg
Telex: 21 53 32

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13
8 München 9
Tel: 0811 69 59 71/75
Cable: HEWPACSA München
Telex: 52 49 85

GREECE

Kostas Karayannis
18, Ermou Street
Athens 126
Tel: 230301.3.5
Cable: RAKAR Athens
Telex: 21 59 62 RKAR GR

IRELAND

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 753-33341
Cable: HEWPEI Slough
Telex: 84413

ITALY

Hewlett-Packard Italiana S.p.A.
Via Amerigo Vespucci 2
20124 Milano
Tel: 6251 (10 lines)
Cable: HEWPACKIT Milan
Telex: 32046

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25
00144 Rome - Eur
Tel: 591 2544
Cable: HEWPACKIT Rome
Telex: 61514

NETHERLANDS

Hewlett-Packard Benelux, N.V.
Weerdestein 117
P.O. Box 7825
Amsterdam, 2 11
Tel: 020-42 7777
Cable: PALOBEN Amsterdam
Telex: 13 216

NORWAY

Hewlett-Packard Norge A/S
Box 149
Nesveien 13
N-1344 Haslum
Tel: 53 83 60
Cable: HEWPAC Oslo
Telex: 6621

PORTUGAL

Empresa Tecnica de Equipamentos Electricos, S.a.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: HEWPACTRA Lisbon
Telex: 1598

SPAIN

Ataio Ingenieros SA
Gaudexer 76
Barcelona 6
Tel: 211-44-66
Cable: TELEATAIO BARCELONA

Ataio Ingenieros SA

Enrique Larreta 12
Madrid, 16
Tel: 215 35 43
Cable: TELEATAIO Madrid
Telex: 2749E

SWEDEN

Hewlett-Packard (Sverige) AB
Hagakergatan 9C
S 431 04 Mölndal 4
Tel: 031 - 27 68 00

Hewlett-Packard (Sverige) AB
Svetsarvägen 7
S171 20 Solna 1
Tel: (08) 98 12 50
Cable: MEASUREMENTS
Stockholm
Telex: 10721

SWITZERLAND

Hewlett Packard (Schweiz) AG
Zürcherstrasse 20
8952 Schlieren
Zurich
Tel: (051) 98 18 21/24
Cable: HEWPACKAG Zurich
Telex: 53933

Hewlett Packard (Schweiz) A.G.
Rue du Bois-du-Lan 7
1217 Meyrin 2 Geneva
Tel: (022) 41 54 00
Cable: HEWPACSA Geneva
Telex: 2 24 86

TURKEY

Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMTION Istanbul

UNITED KINGDOM

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 33341
Cable: HEWPEI Slough
Telex: 84413
Hewlett-Packard Ltd.
The Graftons
Stamford New Road
Altrincham, Cheshire
Tel: 061 258-8626

USSR

Please Contact
Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
1217 Meyrin 2 Geneva
Cable: HEWPACSA Geneva
Switzerland
Telex: 2.24.86

YUGOSLAVIA

Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 34 33 32, 34 26 19
Cable: BELRAMSL Brussels
Telex: 21790

FOR AREAS NOT LISTED, CONTACT:

Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
1217 Meyrin 2 Geneva
Switzerland
Tel: (022) 41 54 00
Cable: HEWPACSA Geneva
Telex: 2.24.86

AFRICA, ASIA, AUSTRALIA

ANGOLA

Telectra Empresa Técnica
de Equipamentos Eléctricos
SAR
Rua de Barbosa Rodrigues
42-1º
Box 6487
Luanda
Cable: TELECTRA Luanda

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20.1371 (6 lines)
Cable: HEWPARD Melbourne
Telex: 31024

Hewlett-Packard Australia
Pty. Ltd.
61 Alexander Street
Crows Nest 2065
New South Wales
Tel: 43.7866
Cable: HEWPARD Sydney
Telex: 21561

Hewlett-Packard Australia
Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 65.2366
Cable: HEWPARD Adelaide

Hewlett-Packard Australia
Pty. Ltd.
2nd Floor, Suite 13
Casablanca Buildings
196 Adelaide Terrace
Perth, W.A. 6000
Tel: 21-3330

Hewlett-Packard Australia
Pty. Ltd.
10 Woolley Street
P.O. Box 191
Dickson A.C.T. 2602
Tel: 49-8194
Cable: HEWPARD Canberra ACT

CEYLON

United Electricals Ltd.
P.O. Box 681
Yahala Building
Staples Street
Colombo 2
Tel: 5496
Cable: HOTPOINT Colombo

CYPRUS

Kyprionics
19-190 Hommer Avenue
P.O. Box 752
Nicosia
Tel: 6282-75628
Cable: HE-I-NAMI

ETHIOPIA

African Salespower & Agency
Private Ltd., Co.
P.O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa

HONG KONG

Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDTCO Hong Kong

INDIA

Blue Star Ltd.
Kasturi Buildings
Jamshedji Tata Rd.
Bombay 20BR, India
Tel: 29 50 21
Telex: 2396
Cable: BLUEFROST

Blue Star Ltd.
Band Box House
Prabhadevi
Bombay 250D, India
Tel: 45 73 01
Telex: 2396
Cable: BLUESTAR

Blue Star Ltd.
14/40 Civil Lines
Kanpur, India
Tel: 6 88 82
Cable: BLUESTAR

Blue Star Ltd.
7 Hare Street
P.O. Box 506
Calcutta 1, India
Tel: 23-0131
Telex: 655
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House,
34 Ring Road
Lajpat Nagar
New Delhi 24, India
Tel: 62 32 76
Telex: 463
Cable: BLUESTAR

Blue Star, Ltd.
96 Park Lane
Secunderabad 3, India
Tel: 7 63 91
Cable: BLUEFROST

Blue Star, Ltd.
23/24 Second Line Beach
Madras 1, India
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR

Blue Star, Ltd.
1B Kaiser Bungalow
Dindli Road
Jamshedpur, India
Tel: 38 04
Cable: BLUESTAR

INDONESIA
Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915 51560
Cable: ILMU
Telex: 809

IRAN

Telecom, Ltd.
P. O. Box 1812
240 Kh. Saba Shomali
Teheran
Tel: 43850, 48111
Cable: BASCOM Teheran

ISRAEL

Electronics & Engineering
Div. of Motorola Israel Ltd.
17 Aminadav Street
Tel-Aviv
Tel: 36941 (3 lines)
Cable: BASTEL Tel-Aviv
Telex: Bastel Ty 033-569

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Nisei Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: 23-1641
Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, Nagoya City
Tel: 551-0215

Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
59 Yoyogi 1-chrome
Shibuya-ku, Tokyo
Tel: 370-2281/7
Telex: 232-2024YHP
Cable: YHPMARKET TOK 23-724

KENYA

R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassador
Nairobi
Tel: 25670, 68206, 58196
Cable: ARIAYTEE Nairobi

KOREA

American Trading Co., Korea, Ltd.
P.O. Box 1103
Dae Kyung Bldg.
107 Sejong Ro
Chongro Ku
Seoul
Tel: 75-5841 (4 lines)
Cable: AMTRACO Seoul

LEBANON

Constantin E. Macridis
Clemenceau Street
P.O. Box 7213
Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA

MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, Selangor
Cable: MECOMB Kuala Lumpur

MOZAMBIQUE

A. N. Goncalves, LDA.
4.1 Apt. 14 Av. D. Luis
P.O. Box 107
Lourenco Marques
Cable: NEGON

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
32-34 Kent Terrace
P.O. Box 9443
Wellington, N.Z.
Tel: 56-559
Cable: HEWPAC Wellington

PAKISTAN (EAST)

Mushko & Company, Ltd.
Zirat Chambers
31, Jinnah Avenue
Dacca
Tel: 280058
Cable: NEWDEAL Dacca

PAKISTAN (WEST)

Mushko & Company, Ltd.
Oosman Chambers
Victoria Road
Karachi 3
Tel: 511027, 512927
Cable: COOPERATOR Karachi

PHILIPPINES

Electromex Inc.
Makati Commercial Center
2129 Pasong Tamo
Makati, Rizal D 708
P.O. Box 1028
Manila
Tel: 89-85-01
Cable: ELEMEX Manila

SINGAPORE

Mechanical and Combustion
Engineering Company Ltd.
9, Jalan Kilang
Singapore, 3
Tel: 642361-3
Cable: MECOMB Singapore

SOUTH AFRICA

Hewlett Packard South Africa
(Pty.), Ltd.
Breecastle House
Bree Street
Cape Town
Tel: 3-6019, 3-6545
Cable: HEWPAC Cape Town
Telex: 5-0006

Hewlett Packard South Africa
(Pty.), Ltd.
P.O. Box 31716
30 De Beer Street
Braamfontein, Johannesburg
Tel: 724-4172 724-4195
Telex: 0226 JH
Cable: HEWPAC Johannesburg

TAIWAN REP. OF CHINA

Hwa Sheng Electronic Co., Ltd.
P. O. Box 1558
Room 404
Chia Hsin Building
No. 96 Chung Shan
North Road, Sec. 2
Taipei
Tel: 555211 Ext. 532-539
545936, 546076, 548661
Cable: VICTRONIX Taipei

TANZANIA

R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassador
Nairobi
Tel: 25670, 26803, 68206, 58196
Cable: ARIAYTEE Nairobi

THAILAND

The International
Engineering Co., Ltd.
P. O. Box 39
614 Sukhumvit Road
Bangkok
Tel: 910722 (7 lines)
Cable: GYSOM
TLX INTENCO BK-226 Bangkok

UGANDA

R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassador
Nairobi
Tel: 25670, 26803, 68206, 58196
Cable: ARIAYTEE Nairobi

VIETNAM

Peninsular Trading Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20.805
Cable: PENINSULA Saigon

ZAMBIA

R. J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Zambia, Central Africa

FOR AREAS NOT LISTED, CONTACT:

Hewlett-Packard
INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPAC Palo Alto
Telex: 034-8461

