

FEBRUARY 15, 1966

INTEGRAL COUNTING

Sodium Iodide (Thallium activated) crystal scintillation detectors are now available with unusually broad, flat, well-defined plateaus, a high degree of resolution and stability, and low noise (see Figure 1). These characteristics greatly increase the speed, convenience and reproducibility of gamma ray counting. Details on plateau curves, integral counting and equipment set-up are discussed here.

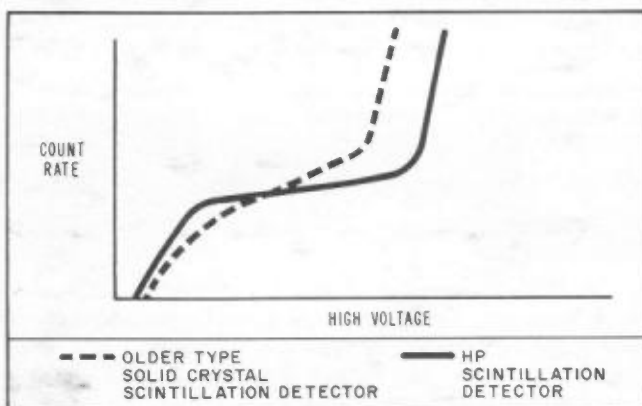


Figure 1. Plateau Curve Comparison



A complete integral counting set-up. Operator is inserting test tube sample into well type scintillation detector in lead shield.

INTEGRAL COUNTING

In counting the pulses produced by a gamma ray detector, the term integral counting is applied when all pulses above a preset minimum level are counted. In counting modes other than integral counting, the scaler discriminator is set to count only pulses within a certain band of voltage amplitudes. Integral counting is useful when working with low count rates if it is desirable to count all possible gammas regardless of energy in order to keep the counting time to a minimum and still maintain acceptable accuracy and stability.

PLATEAU CURVES

A plateau curve is a plot of count rate versus detector high voltage supply setting (Figures 1, 2, and 3). The curves vary slightly for different radionuclides.

To determine the plateau curve for a given radionuclide and detector, set the scaler's discriminator level to approximately 100 mv, progressively increase the high voltage to the photomultiplier in the detector, and record the number of counts at each voltage step. When the high voltage to the photomultiplier is progressively increased, the pulse sizes of gammas of all energy levels will increase. More and more pulses will exceed the discriminator level of the scaler until at the knee of the curve a large percentage of the gammas entering the detector will be counted. The plateau area ensues, and further increase in voltage will not produce much of an increase in counts.

With a scintillation detector the plateau ends when the gain due to high voltage is great enough to amplify the thermionic noise (dark noise) from the photocathode sufficiently to produce pulses that exceed the discriminator level. It is important to use a tube with low noise characteristics and an amplifier with sufficient electronic gain so the photomultiplier may be operated below a value which produces noise pulses.

For integral gamma counting it is good practice to determine the plateau curve for each scintillation detector and for each radionuclide to be measured before selecting the best operating high voltage. With long, flat plateaus such as those in Figure 2 it is not only easy to find the plateau, but it is also possible to choose a high voltage supply setting that is useful for integral counting of a number of gamma emitters.

Good energy resolution (sharper peak in a plot of count rate versus gamma energy level) is important in a detector because it contributes to a broader plateau and



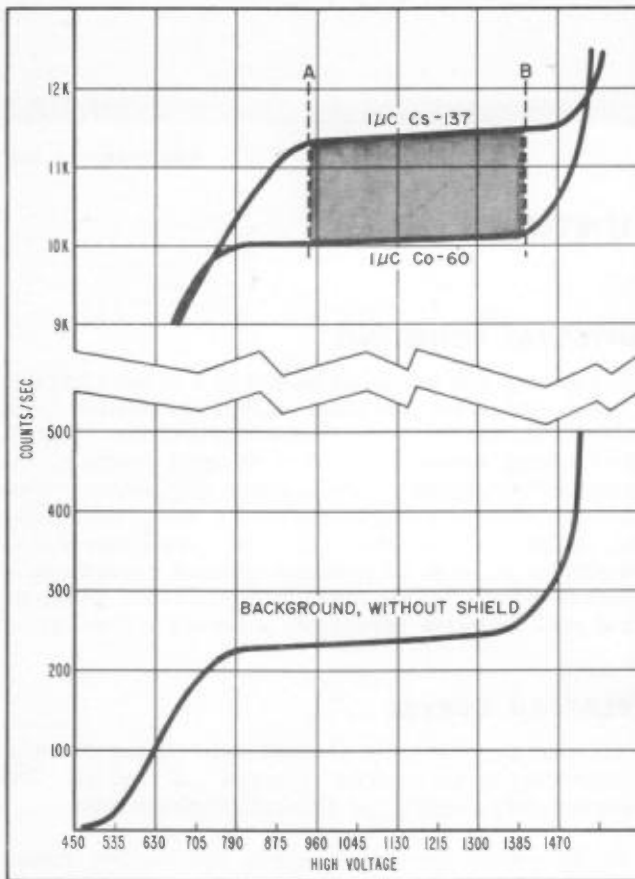


Figure 2. Plateau Curves for Background, Cs-137 and Co-60. Obtained with HP 10601A Scintillation Detector, 5201L Scaler-Timer, 5551A Power Supply. Plateau Lengths and Slopes are: Background Curve, 600 v and 0.25%/100v; Cs-137 Curve, 520v and 0.34%/100v; Co-60 Curve, 600v and 0.20%/100v.

sharp knee, but is more important for resolving double peaks in non-integral counting techniques. Figure 2 illustrates the well defined curves that HP Scintillation Detectors give. This performance is partly due to good energy resolution. Incidentally, the knees of the curves for Co-60 and Cs-137 are different because of the greater abundance of low energy photons from the 31.5 Kev X-ray of Ba-137, which is a decay product of Cs-137.

ADVANTAGES OF GOOD PLATEAUS

Broad plateaus of low slope and with well defined knees produce the following benefits in integral gamma ray counting:

1. Efficiency (cps/ μ c) is only dependent upon crystal size and geometry, and not upon the particular detector. Consequently, in multi-station counting rooms, detectors of the same model need not be cross-calibrated. As an example, in our own counting laboratory four unselected Model 10611A detectors gave these count rates using the same sample: 20,334 - 20,411 - 20,462 and 20,498 cps.

2. One high voltage value (or a range of values as from A to B in Figure 2) can be found that permits confidently achieving plateau operation even when different radionuclides are counted with either the same or different detectors (different radionuclides produce different plateau curve shapes, see Figure 2).

3. Minor high voltage supply fluctuations will not appreciably change the count rate, and successive measurements will be completely reproducible for practical purposes.

SCINTILLATION AND GEIGER DETECTORS COMPARED

Historically, scintillation detectors have been noted for having poorer plateaus than Geiger detectors (1); poorer because they are narrower, of much greater slope, and have ill-defined knees (compare Figures 1 and 3). Now, however, these disadvantages are virtually eliminated in standard Hewlett-Packard Scintillation Detectors (compare Figures 2 and 3).

Three major advantages of inorganic crystal scintillation detectors over gas (Geiger) detectors for the majority of integral gamma counting applications are:

1. Their markedly greater efficiency.
2. They can measure considerably higher average counting rates.

3. When operated in the recommended range of high voltages, detector output pulse amplitude is proportional to gamma energy lost in the detector; while in Geiger detectors, pulses are of an almost uniform amplitude regardless of energy.

HIGH VOLTAGE SUPPLY REQUIREMENTS

A well-regulated power supply is a critical requirement when using counting techniques other than integral counting but is not generally critical for integral counting. Low output ripple is necessary to keep detector output noise low. A vernier voltage control, in addition to a stepped control, aids in rapid, convenient, accurate system calibration and set-up.

- (1) R. W. Engstrom and J. L. Weaver, *Nucleonics*, Feb 1959, Page 70, "Are Plateaus Significant in Scintillation Counting."

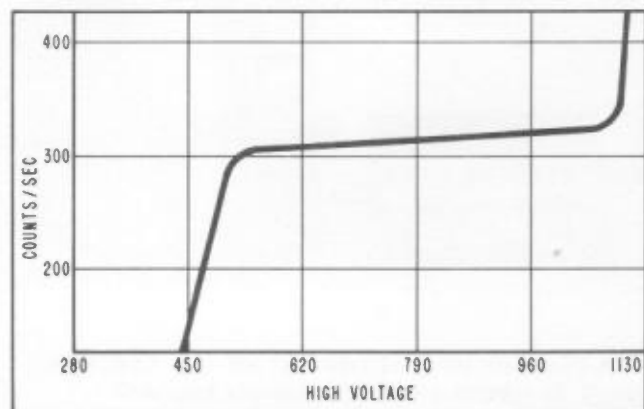


Figure 3. Typical Geiger Plateau (ranges from 150-600 volts with slope of 1-2%/100v).

TYPICAL EQUIPMENT FOR INTEGRAL COUNTING



5551A

A well-regulated high voltage supply with stepped and vernier controls (on same shaft) for determining and setting plateaus quickly and reliably.



5201L

Front panel controls of a scaler useful in integral counting. Discriminator linearity of 0.25%, stability of 0.01% and odometer type dials for discriminator setting increase the accuracy and reliability of measurement. In-line readout allows rapid error-free readout. Pulse height analyzer (PHA) control selects integral mode, or wide window or narrow window differential counting modes. Pulse pair resolution is 200 nsec. Preset time and preset count capabilities are provided.



DETECTORS

Well-type scintillation detector with $\pm 2\%$ stability and better than 10% FWHM resolution. High performance is achieved because of selected photomultiplier tube and premium NaI (Tl) crystal. "O" ring seals make the unit moisture-proof. Rear view shows cable connections, focus control, and gain control for built-in amplifier. Output impedance of 50 ohms allows long coaxial cable between detector and scaler.

Other ϕ_p detector sizes and types are available with better than $\pm 1\%$ stability and better than 8% FWHM resolution. The preamplifier-amplifier is available separately if the user wishes to assemble a special purpose detector.

HEWLETT - PACKARD SALES AND SERVICE OFFICES in the United States and Canada

ALABAMA

Huntsville, 35802
2003 Byrd Spring Rd. S.W.
(205) 881-4591
TWX: 510-579-2204

ALASKA

Bellevue, Wash. 98004
11656 N.E. 8th Street
(206) 454-3971
TWX: 910-443-2303

ARIZONA

Scottsdale, 85251
3009 No. Scottsdale Rd.
(602) 945-7601
TWX: 602-949-0111

Tucson, 85716
232 So. Tucson Blvd.
(602) 623-2564
TWX: 602-792-2759

CALIFORNIA

North Hollywood, 91604
3939 Lankershim Blvd.
(213) 877-1282 and 766-3811
TWX: 910-499-2170

Sacramento, 95821
2591 Carlsbad Ave.
(916) 482-1463
TWX: 916-444-8683

San Diego, 92106
1055 Shafter Street
(714) 223-8103
TWX: 714-276-4263

Palo Alto, 94303
1101 Embarcadero Rd.
(415) 327-6500
TWX: 910-373-1280

COLORADO

Englewood, 80110
7965 East Prentice
(303) 771-3455
TWX: 303-771-3056

CONNECTICUT

Middletown, 06458
589 Saybrook Rd.
(203) 346-6611
TWX: 710-428-2036

FLORIDA

Miami, 33125
2907 Northwest 7th St.
(305) 635-6461

Orlando, 32803
621 Commonwealth Ave.
(305) 425-5541
TWX: 305-275-1234

St. Petersburg, 33708
410-150th Ave., Madeira Beach
(813) 391-0211
TWX: 813-391-0666

GEORGIA

Atlanta, 30305
3110 Maple Drive, N.E.
(404) 233-1141
TWX: 810-751-3283

HAWAII

North Hollywood, Calif. 91604
3939 Lankershim Blvd.
(213) 877-1282 and 766-3811
TWX: 910-499-2170

ILLINOIS

Skokie, 60078
5500 Howard Street
(312) 677-0400
TWX: 910-223-3613

INDIANA

Indianapolis, 46205
3919 Meadows Dr.
(317) 546-4891
TWX: 317-635-4300

LOUISIANA

New Orleans
(504) 522-4359

MARYLAND

Baltimore, 21207
6660 Security Blvd.
(301) 944-5400

Rockville, 20852
12303 Twinbrook Pkwy.
(301) 427-7560
TWX: 710-828-9684

MASSACHUSETTS

Burlington, 01804
Middlesex Turnpike
(617) 272-9000
TWX: 710-332-0382

MICHIGAN

Southfield, 48076
24315 Northwestern Hwy.
(313) 353-9100
TWX: 313-357-4425

MINNESOTA

St. Paul, 55114
2459 University Ave.
(612) 646-7881
TWX: 910-563-3734

MISSOURI

Kansas City, 64131
7916 Paseo Street
(816) 444-9494
TWX: 816-556-2423

St. Louis, 63144
2814 South Brentwood Blvd.
(314) 647-4350
TWX: 314-962-3933

NEW JERSEY

Eatontown
(201) 542-0852

Englewood, 07631
391 Grand Avenue
(201) 567-3933

NEW MEXICO

Albuquerque, 87108
6501 Lomas Blvd., N.E.
(505) 255-5586
TWX: 910-989-1655

Las Cruces, 88001
114 S. Water Street
(505) 526-2486
TWX: 505-524-2671

NEW YORK

New York, 10021
236 East 75th Street
(212) 879-2023
TWX: 710-581-4376

Rochester, 14623
39 Saginaw Drive
(716) 473-9500
TWX: 510-253-5981

Poughkeepsie, 12601
82 Washington Street
(914) 454-7330
TWX: 914-452-7425

Syracuse, 13211
5858 East Molloy Rd.
(315) 454-2486
TWX: 710-541-0482

Endicott, 13764
1219 Campville Rd.
(607) 754-0050
TWX: 510-252-0890

NORTH CAROLINA

High Point, 27262
1923 N. Main Street
(919) 882-6873
TWX: 510-926-1516

OHIO

Cleveland, 44129
5579 Pearl Road
(216) 884-9209
TWX: 216-888-0715

Dayton, 45409
1250 W. Dorothy Lane
(513) 298-0351
TWX: 513-944-0090

OKLAHOMA

Oklahoma City
(405) 235-7062

PENNSYLVANIA

Camp Hill
(717) 737-6791

West Conshohocken, 19428
144 Elizabeth Street
(215) 248-1600 and 828-6200
TWX: 215-828-3847

Monroeville, 15146
2545 Moss Side Blvd.
(412) 271-5227
TWX: 710-797-3650

TEXAS

Dallas, 75209
P.O. Box 7166, 3605 Inwood Rd.
(214) 357-1881 and 332-6667
TWX: 910-861-4081

Houston, 77027
P.O. Box 22813, 4242 Richmond Ave
(713) 667-2407
TWX: 713-571-1353

UTAH

Salt Lake City, 84115
1482 Major St.
(801) 486-8166
TWX: 801-521-2604

VIRGINIA

Richmond, 23230
2112 Spencer Road
(703) 282-5451
TWX: 710-956-0157

WASHINGTON

Bellevue, 98004
11656 N. E. 8th St.
(206) 454-3971
TWX: 910-443-2303

GOVERNMENT CONTRACTING OFFICES

Middletown, Pa. 17057
Hewlett-Packard
Contract Marketing Division
Olmsted Plaza
(717) 944-7401
TWX: 717-760-4816

West Conshohocken, Pa. 19428
Hewlett-Packard
Contract Marketing Division
144 Elizabeth Street
(215) 753-1811
TWX: 215-820-3847

CANADA

Montreal, Quebec
Hewlett-Packard (Canada) Ltd.
8270 Mayrand Street
(514) 735-2273
TWX: 610-421-3484

Ottawa, Ontario
Hewlett-Packard (Canada) Ltd.
1762 Carling Avenue
(613) 722-4223
TWX: 610-562-1952

Toronto, Ontario
Hewlett-Packard (Canada) Ltd.
1415 Lawrence Avenue West
(416) 249-9196
TWX: 610-492-2382

Vancouver, B.C.
Hewlett-Packard (Canada) Ltd.
2184 W. Broadway
(604) 738-7520
TWX: 610-922-5059